




SIA "RIČ" Granīta iela 26, Stopiņu pag., Rīgas raj., LV-1057, Latvija.
Tāl. +371 7701560. Fakss +371 7701713 E-mail: tkrich@mailbox.riga.lv.
[Http://www.rich.lv](http://www.rich.lv)
24 hours emergency service +371 29205824

Thermo King CargoPrint External Mount Printer

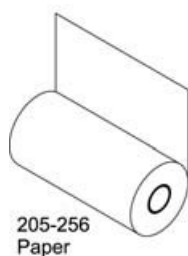

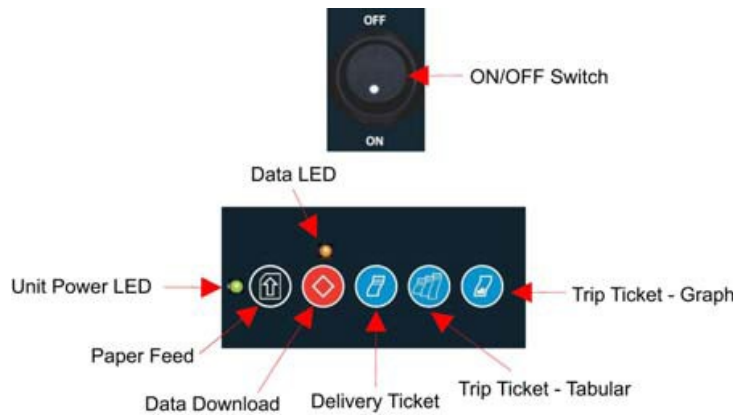

КРАТКОЕ ОПИСАНИЕ










Принтер имеет встроенную память , для загрузки данных в принтер перед распечаткой нажать  .

Лампочка DATA LED во время загрузки памяти будет моргать и в зависимости от объема данных загрузка может занять до 10 минут.

После загрузки данных печать на ленту будет происходить быстро

1. Когда принтер включен лампа POWER LED горит.
2. Если закончилась бумага, мигает оранжевая DATA LED.
3. После окончания распечатки чека , во избежании разряда АКБ выключайте принтер .
4. При очень холодной погоде (ниже -10°C), Thermo king рекомендует НЕ выключать принтер .

КАК и ЗАЧЕМ НАЖИМАТЬ КНОПКИ :

LED ON	STATUS ONLINE	КНОПКА	ДЕЙСТВИЕ	РЕЗУЛЬТАТ
		Нажать 		Для промотки бумаги
			Нажать ОДИН раз	Короткий чек текущей темп
Нажать 	подождать пока перестанет мигать “Ж” лампа –нажать 			Печать данных пос леднего рейса в табличном виде
Нажать 	подождать пока перестанет мигать “Ж” лампа –нажать 			Печать данных последнего рейса в графическом виде
Нажать 	подождать пока перестанет мигать “Ж” лампа –нажать еще раз 			
	подождать пока перестанет мигать “Ж” лампа –нажать 		или 	для распечатки предыдущих рейсов в графическом или табличном виде

Очень желательно :


Перед началом рейса запустить :” START OF TRIP”:

На пульте холодильника (с SR2 пультом) кнопкой “MENU” выбрать “DATALOGER” затем нажать “SELECT” , выбрать START OF TRIP и запустить (SELECT) START TRIP.

Это значительно ускорит выбор и печать данных за прошлые рейсы !!!

II. Operating instructions

The front panel of the device consist of LEDs, buttons and an ON/OFF switch. The three blue buttons have different functions in normal mode and in configuration mode.

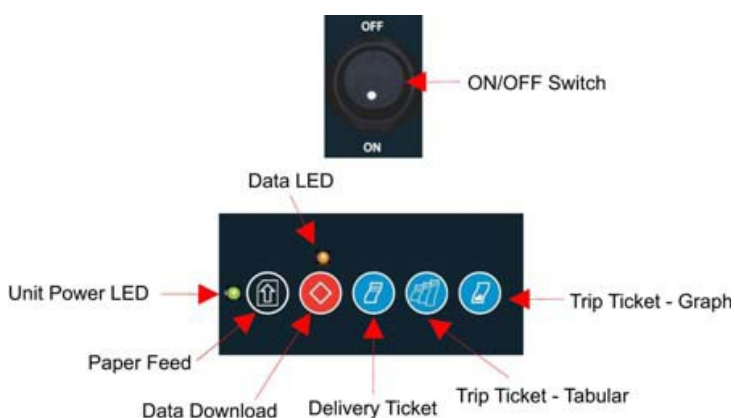

The Printer has an internal memory. When the download button is pressed, the data LED starts blinking and the data transfer takes place. For long trips and units using DAS, the download can take up to 10 minutes. Once the

data is in the memory, the printing takes place very quickly.

1. With the printer ON the power LED at the left of the keypad will be illuminated.
2. When the paper roll is empty the printer enters the offline mode and flashes the orange status LED.
3. To avoid unit battery run-down after printing, turn off the printer.
4. In a very cold ambient conditions of <-10°C, TK recommends to keep the printer switched ON at all time.
5. In order to obtain 'Trip ticket', first hit 'download button' . LED on top of it will start flashing. When flashing stops, then press trip tabular ticket .
6. In order to download a previous trip, press the 'download button' in a time window of 1 minute after finishing flashing.
7. The printer memory will clear out after 1 minute. It will then be possible to return to the latest trip report.

LED STATUS KEY ACTION RESULT



ON ONLINE Press briefly Delivery Ticket



wait Press briefly Latest Trip - Tabular Ticket



wait Press briefly Latest Trip - Graphical Ticket



Press briefly Copy of Previous Tabular Trip Ticket



Press briefly Copy of Previous Graphical Trip Ticket



Press briefly Download previous trip report



Press and hold Feeds paper until key is released



&



Press briefly Exit configuration mode-Enter normal mode